

Аркуш1

Color	Canon	HP
Black	701	Q3960A
Cyan	701	Q3961A
Yellow	701	Q3962A
Magenta	701	Q3963A
Black	703	Q2612a
Black	707	Q6000a
Cyan	707	Q6001a
Yellow	707	Q6002a
Magenta	707	Q6003a
Black	708	Q5949A
Black	708H	Q5949X
Black	710	Q6511A
Black	710H	Q6511X
Black	711	Q6470A
Cyan	711	Q6471A (Q7581A)
Yellow	711	Q6472A (Q7582A)
Magenta	711	Q6473A (Q7583A)
Black	712	CB435A
Black	713	CB436A
Black	715	Q7553A
Black	715H	Q7553X
Black	716	CB540A
Cyan	716	CB541A
Yellow	716	CB542A
Magenta	716	CB543A
Black	719	CE505A
Black	719H	CE505X
Black	723	CE250A
Cyan	723	CE251A
Yellow	723	CE252A
Magenta	723	CE253A

Аркуш1

Color	Canon	HP
Black	725	CE285A
Black	726	CE278A
Black	728	CE278A
Black	729	CE310A
Cyan	729	CE311A
Yellow	729	CE312A
Magenta	729	CE313A
Black	EP-22	C4092A
Black	EP-25	C7115A
Black	EP-27	Несумісний з HP
Black	EP-32	C4096A
Black	EP-51	C4127A
Black	EP-52	C4127X
Black	EP-65	C4129X
Black	FX-10	Іюді з Q2612A
Black	EP-87	Q3960A
Cyan	EP-87	Q3961A
Yellow	EP-87	Q3962A
Magenta	EP-87	Q3963A